FULL 40, 60, 80

| Free Visual Safety Report | Set next service date in media system |
|---|--|
| Free Wash and Vac | Check alarm and immobiliser |
| Free Hybrid Health Check (model dependant) | Check and adjust gear cables (model dependant) |
| Check all pedals and components | Inspect glass and light lenses |
| Check steering wheel | Replace battery(s) in locking remote(s) |
| Check horn | Check and inspect suspension ball free play |
| Check washers | Inspect and where necessary replace front and rear differential oils (model dependant) |
| Check wipers | Inspect drive shaft boots |
| Check interior lights | Inspect suspension ball joints and dust covers |
| Check exterior lights | Inspect fuel and brake pipes |
| Check warning lights | Inspect exhaust pipes and mountings |
| Change air conditioning/pollen filter (model dependant) | Inspect wheel bearings |
| Check seat belts | Inspect hand brake |
| Check floor mat security | Inspect clutch fluid (model dependant)* |
| Drain engine oil | Inspect charcoal canister (model dependant) |
| Replace oil filter | Check fuel cap & lines |
| Refill engine oil | 4-wheel alignment check - extra charge for adjustment |
| Check levels and refill as required | Replace brake fluid (every two years) |
| Inspect suspension | Inspect air filter - replace as required (model dependant) |
| Inspect steering | Replace engine coolant (model dependant) |
| Inspect tyres | Check transmission oil - replace as required (model dependant) |
| Inspect wheels | Check transfer/differential box oil - replace as required (model dependant) |
| Check and adjust tyre pressures | Lubricate prop shat joints (model dependant) |
| Inspect spare wheel / spare saver / tyre repair kit (model dependant) | Tighten prop shaft bolts (model dependant) |
| Inspect brake pads and discs | Conduct diesel smoke test (model dependant) |
| Torque tighten wheel nuts | Replace spark plugs (model and interval dependant) |
| Check radiator and condenser | Replace diesel fuel filter (model dependant) |
| Inspect drive belts | Replace timing belt (model dependant)* |
| Check 12v battery | |
| Recheck for fluid leaks - underside and engine bay | |
| Recheck all levels | |

Reset service lights or monitor as required

9